


# ECLIPSE DESK

## ASSEMBLY INSTRUCTION

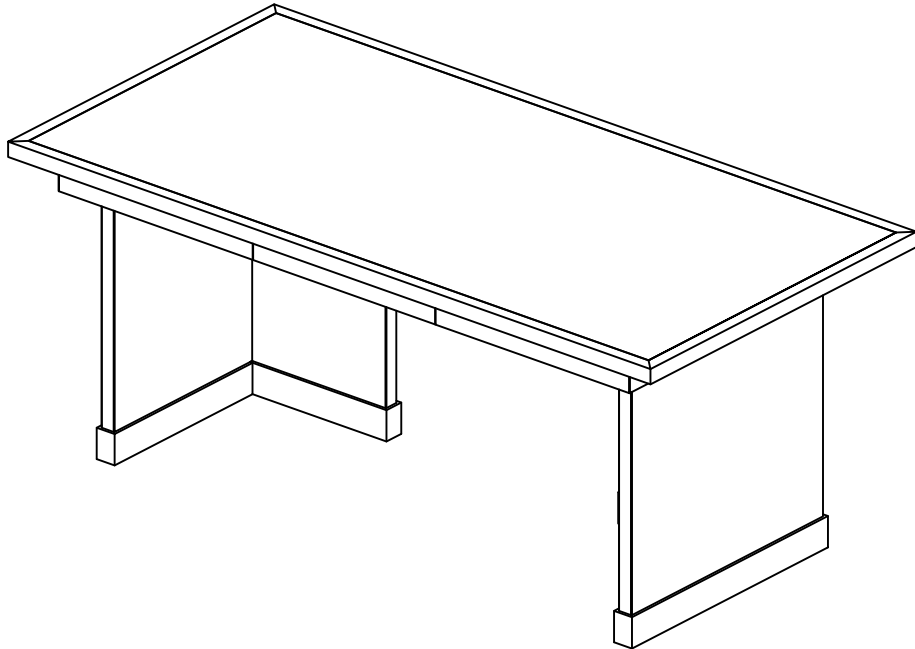


### IMPORTANT NOTE:

- Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.


Remove all wrapping material, including staples & packing straps before you start to assemble.

DO NOT tighten all screws and bolts until completely assembled.

Keep all hardware parts out of reach of children.

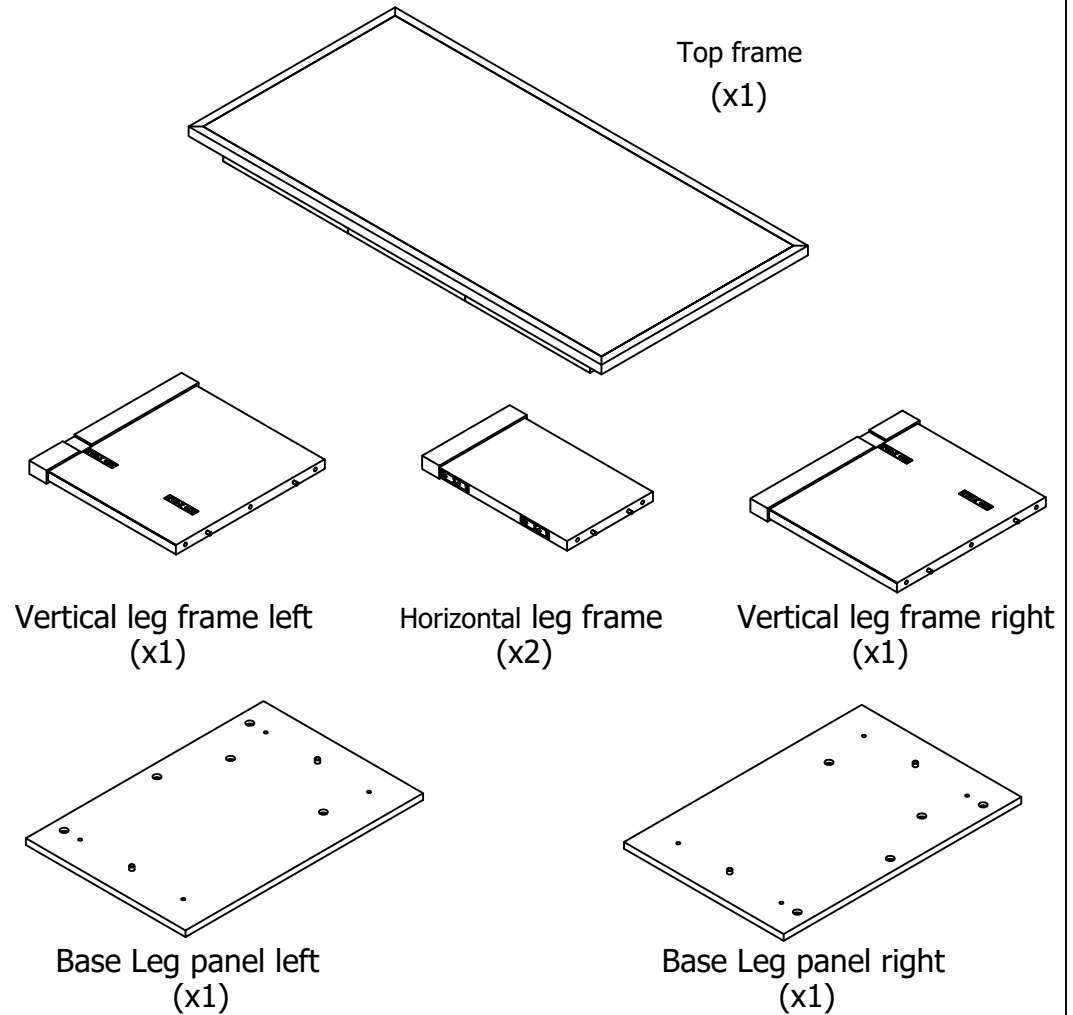

Note: Insert lock washer first followed by flat washer to allen bolt

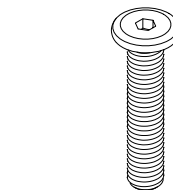


**A** Allen Head Bolt 30mm  
x18




**B** Plain Washer  
x18



 
**C** Lock Washer  
x18



**D** Allen Wrench  
x1

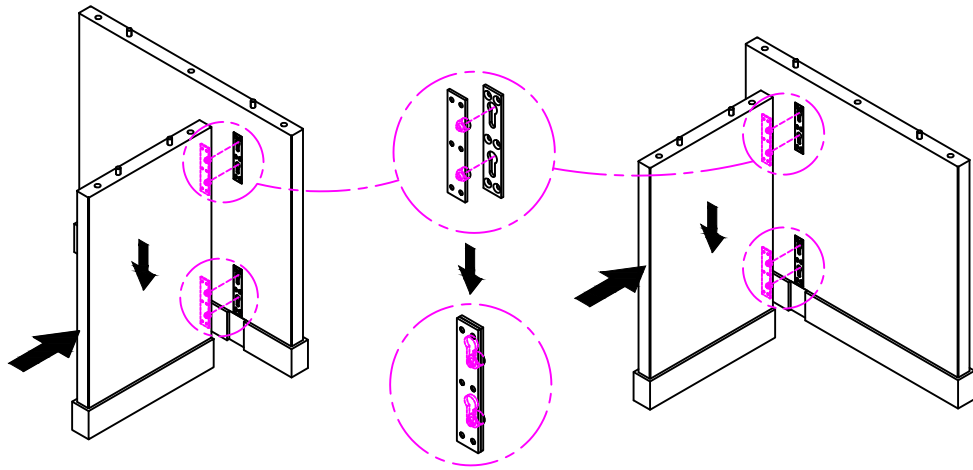


**Step 1:** ALIGN TWO VERTICAL BASE PANELS  
Align the base panel with the locators.

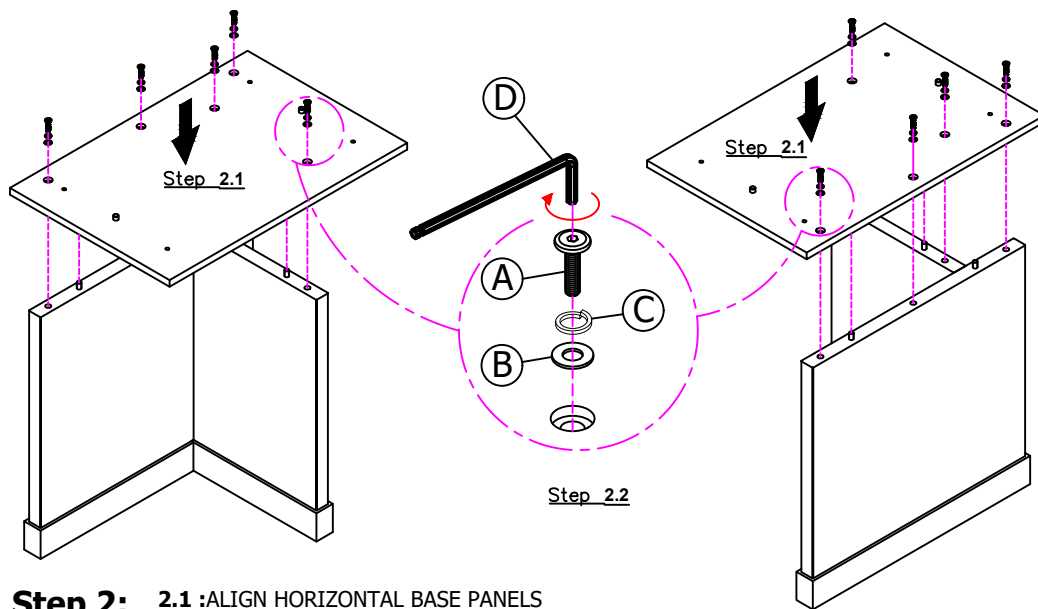



**Step 2:** **2.1** :ALIGN HORIZONTAL BASE PANELS  
Align the horizontal base panel on top of the vertical panels.

**2.2** :FIXING THE BASE PANELS  
Using allen key to fix the panels with five longer allen box.  
Similar for the other base parts.

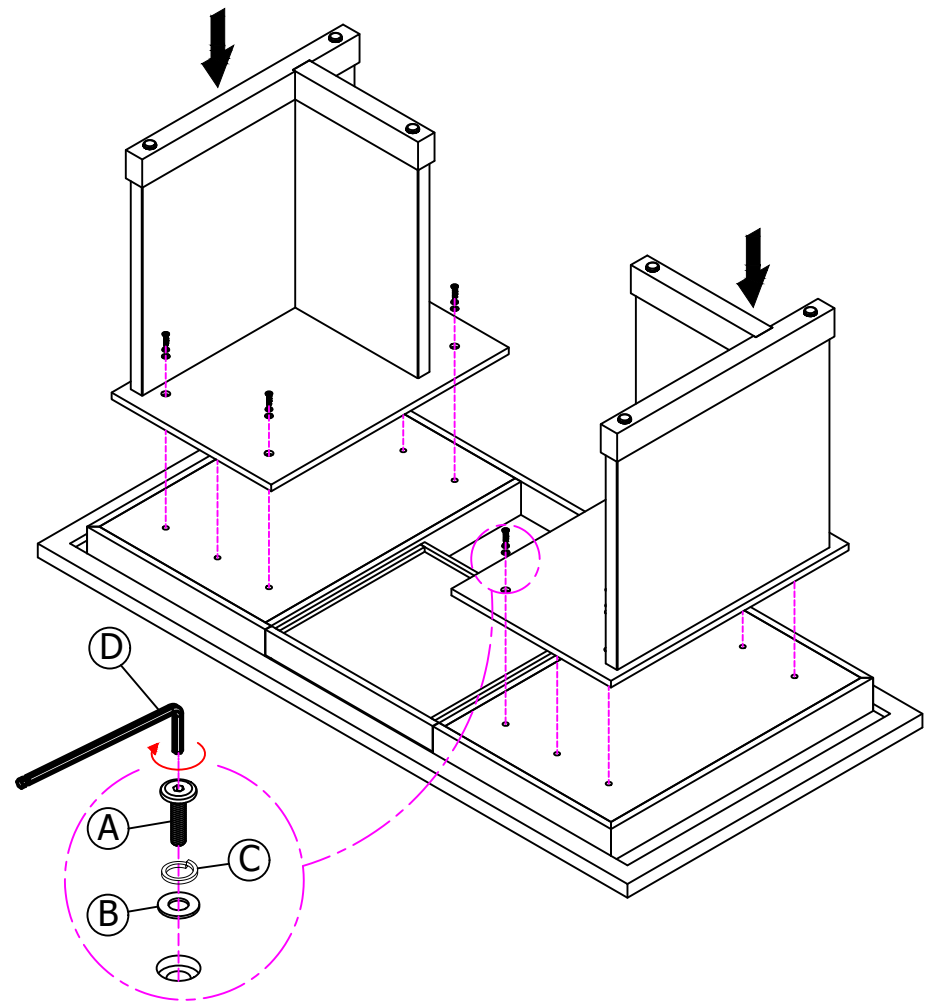

**Step 3:** ALIGN THE BASE WITH TOP  
Align two base parts with the top.  
Using the allen key to fix the base with the top by eight shorter allen bolts.

**Step 4:** FINISH ASSEMBLING  
Two people carefully turn the desk up.

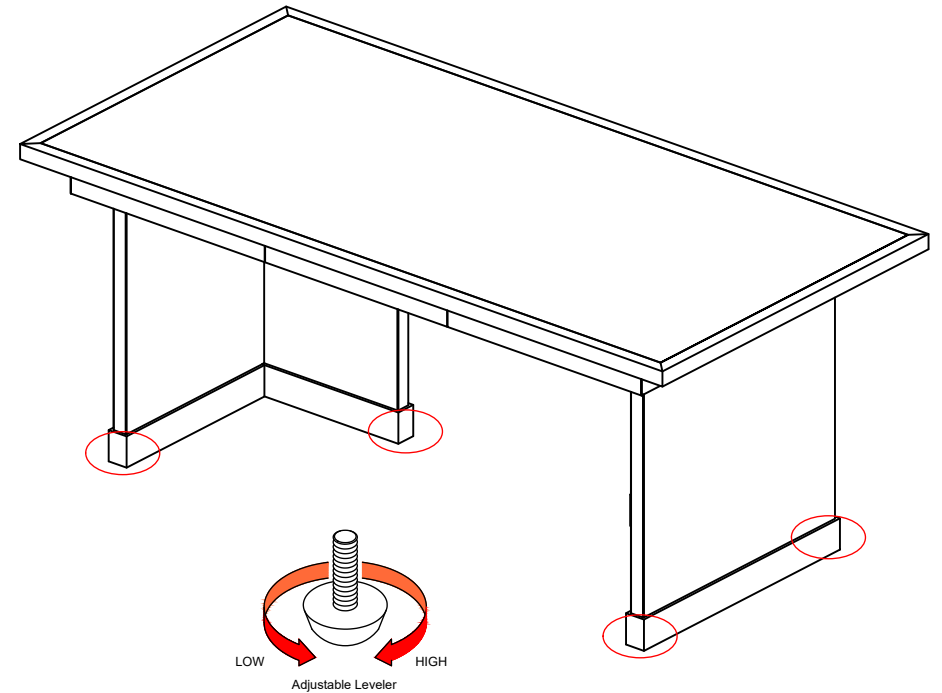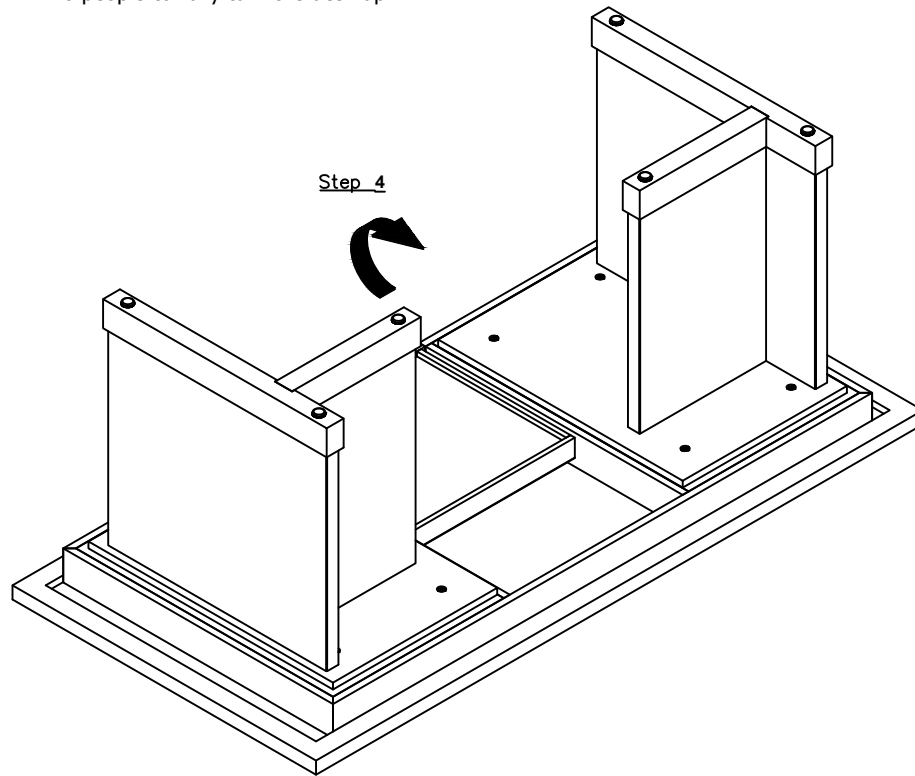

**INSTRUCTION NOTE**

For Adjustable Leveler

The legs on this case have adjustable levelers attached underneath. If you find this product is not horizontal, please adjust the levelers under the legs accordingly to make sure this product to be upright horizontal.

When moving furniture, please lift instead of pulling to avoid scratching floor.  
(See the above illustration)