



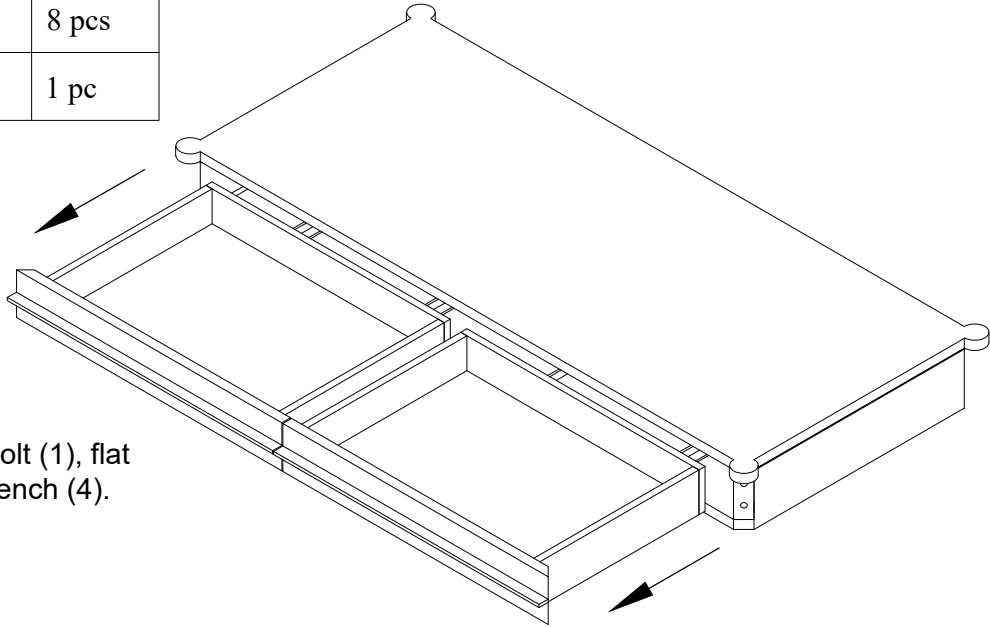


# ASSEMBLY INSTRUCTIONS


## 2511-42 Brookwood Desk

NO.	ITEM	DESCRIPTION	QTY.
1		Bolt M8x60	8 pcs
2		Flat washer Ø8	8 pcs
3		Spring washer Ø8	8 pcs
4		Allen Key M4	1 pc

Step 1 - Pull out 2 drawers first.





Step 2 - Install 4 legs into top by using bolt (1), flat washers (2), spring washers (3) and wrench (4). Fully all tightened bolts

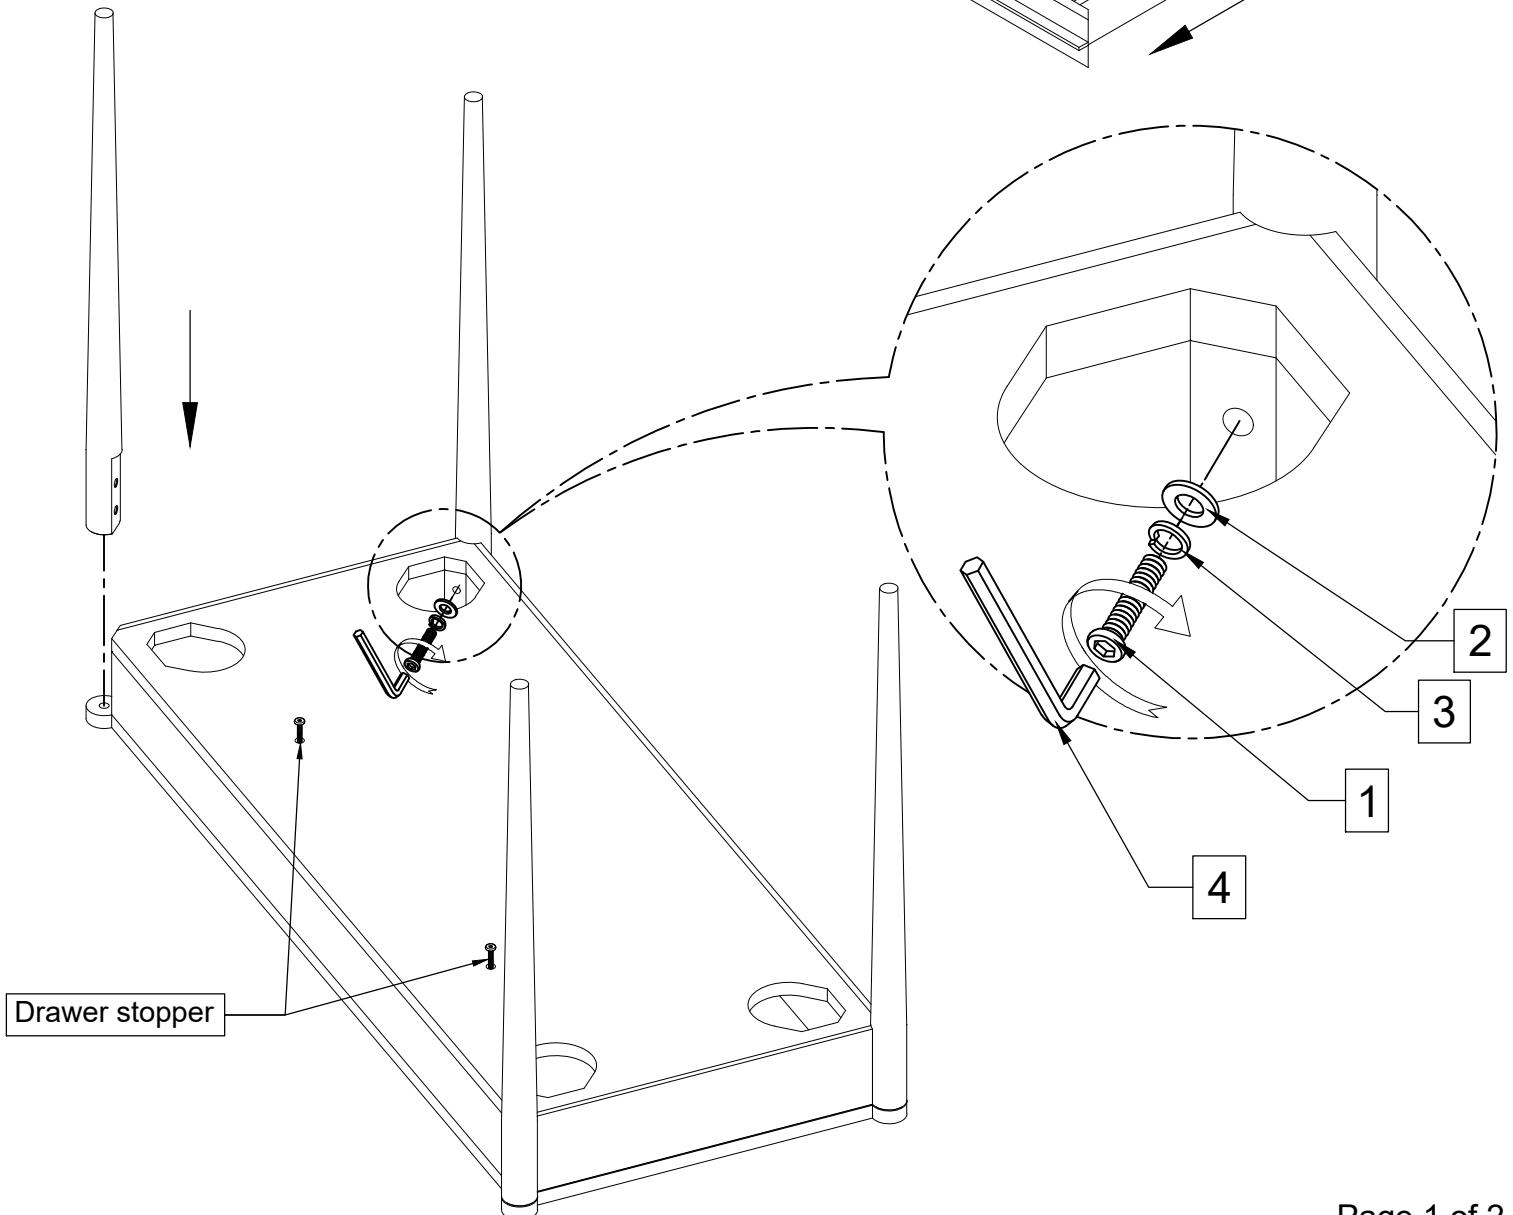

# ASSEMBLY INSTRUCTIONS

## 2511-42 Brookwood Desk

Step 3 - Assembly 2 drawers to the table.

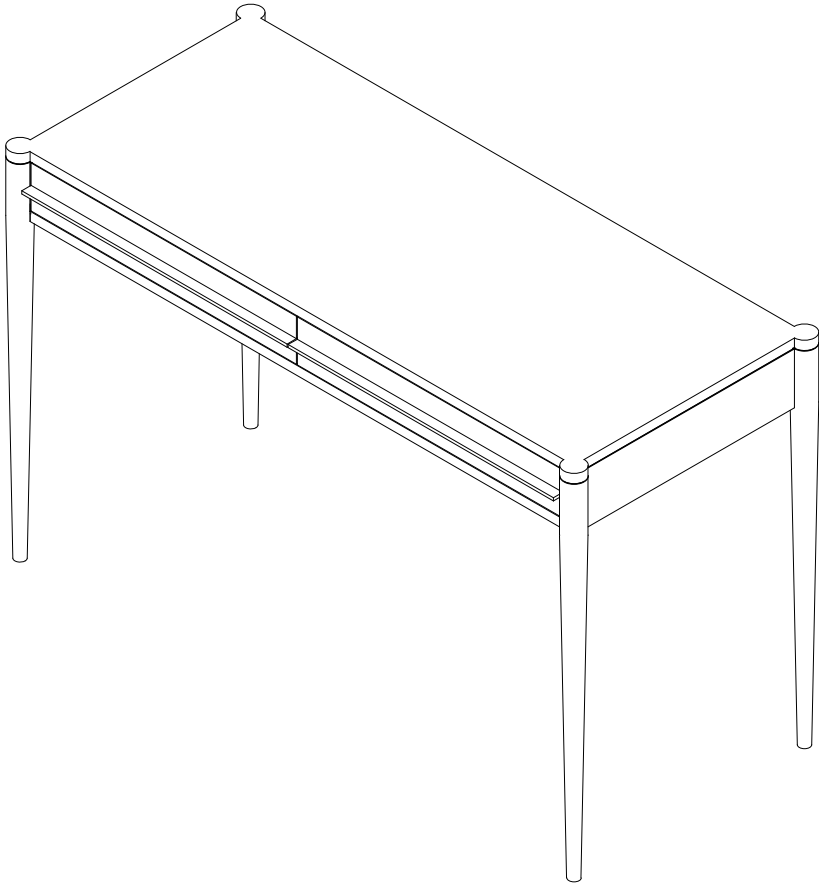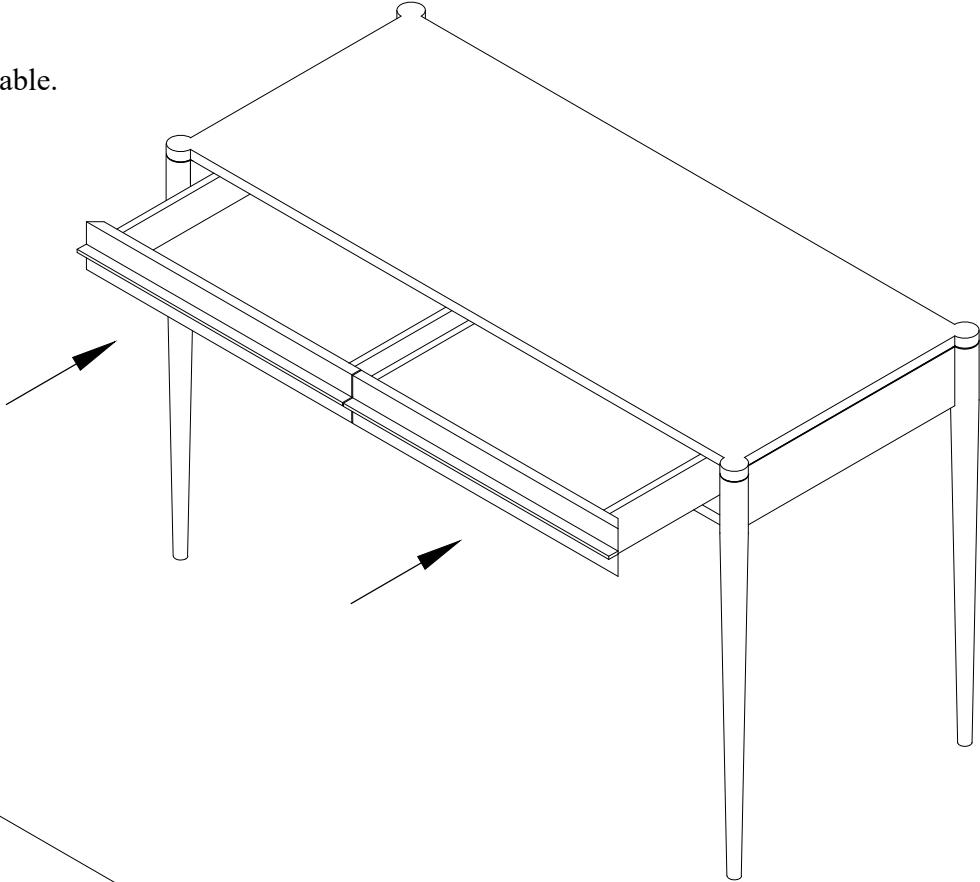

Assembly is complete