




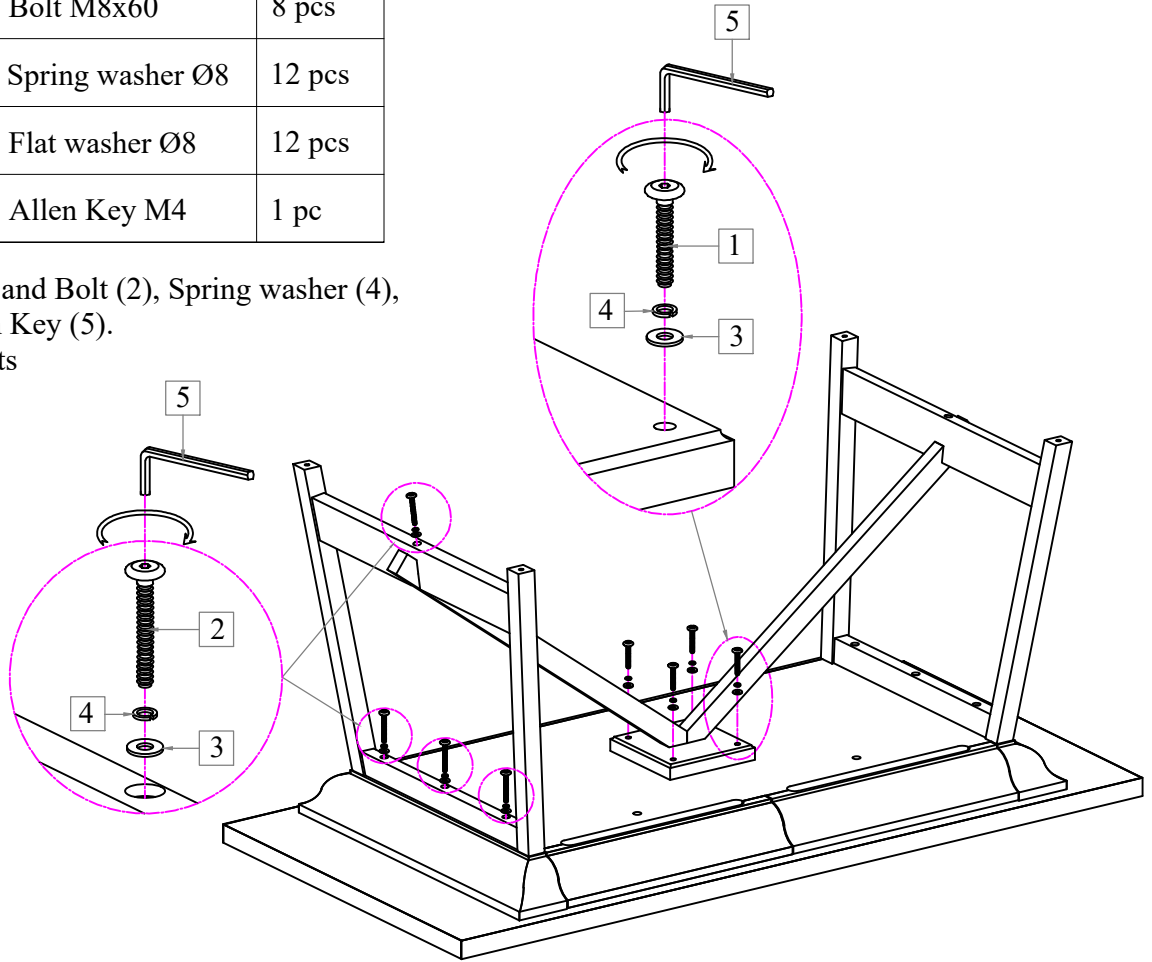


# ASSEMBLY INSTRUCTIONS

## LL251 CRAFTSMEN DESK

NO.	ITEM	DESCRIPTION	QTY.
1		Bolt M8x50	4 pcs
2		Bolt M8x60	8 pcs
3		Spring washer Ø8	12 pcs
4		Flat washer Ø8	12 pcs
5		Allen Key M4	1 pc

Step 1. Using Bolt (1) and Bolt (2), Spring washer (4), Flat washer (3), Allen Key (5).  
Fully tightened all bolts



Step 2. Assembly is complete.

